


# Instructions For N-Scale Military Truck Decals

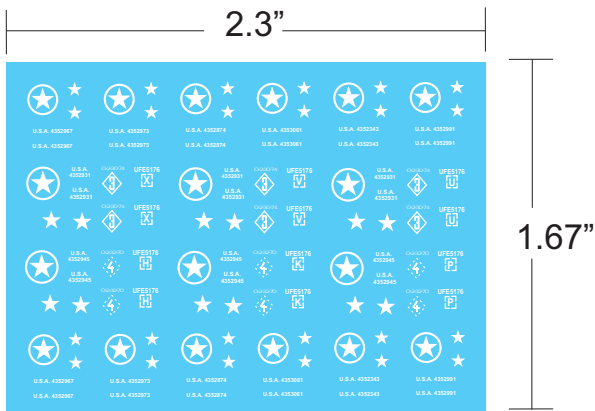


[www.eaelec.com](http://www.eaelec.com)

Decals made in the USA


Decals should always be placed on a gloss finish. If you have a flat finish you should apply gloss coat before placing decals. Decals don't set properly on a flat finish. After the decals are completely dry, you can apply dull coat to restore the flat finish.

## US6 Decal Placement for Red Army and Warsaw Pact

### Left View

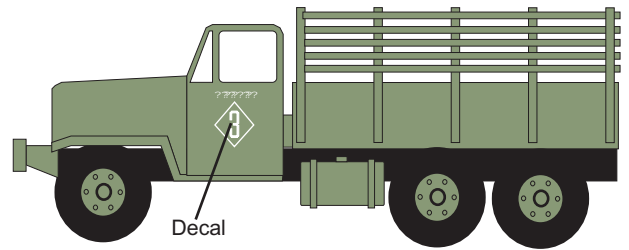

### Right View

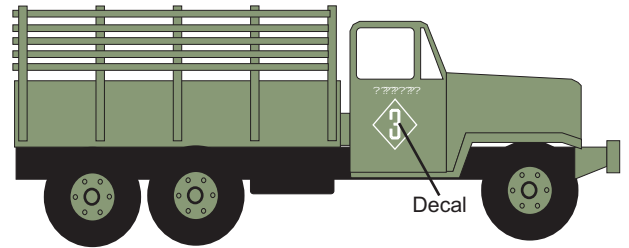

### Red Army




### Warsaw Pact




## US Army CCKW Decal Placement


### Left View

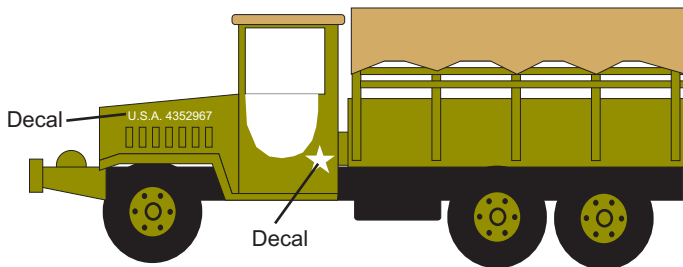

### Right View

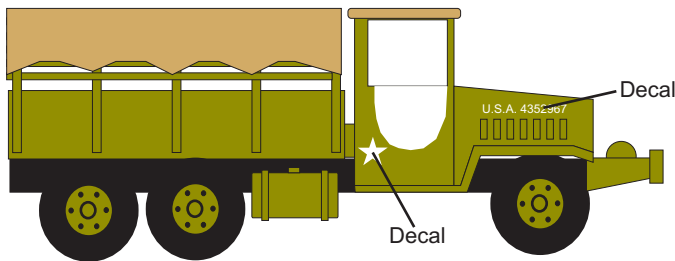


### Top View

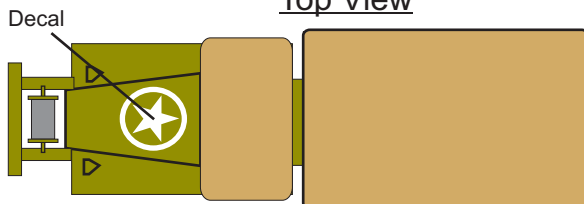


## US6 Decal Placement for US Army

### Left View

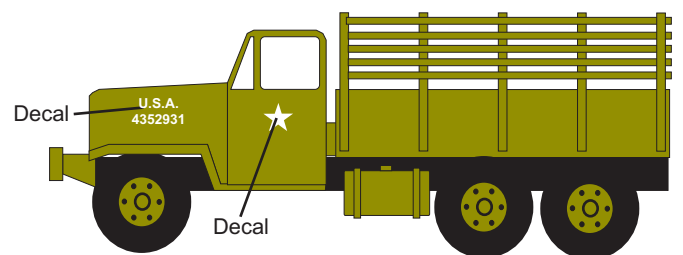

### Right View

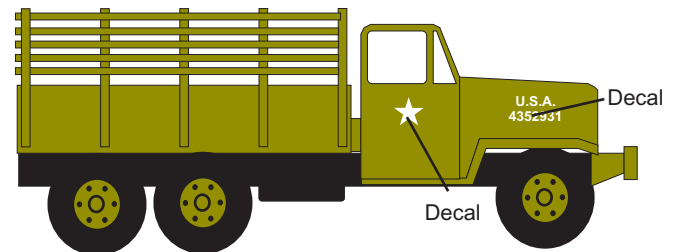

### Top View

