


Instructions For Z-Scale Military Truck Decals

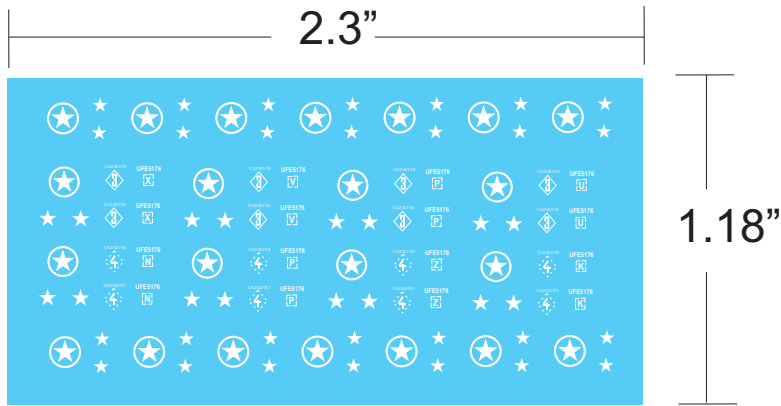


www.eaelec.com

Decals made in the USA


Decals should always be placed on a gloss finish. If you have a flat finish you should apply gloss coat before placing decals. Decals don't set properly on a flat finish. After the decals are completely dry, you can apply dull coat to restore the flat finish.

US6 Decal Placement for Red Army and Warsaw Pact

Left View

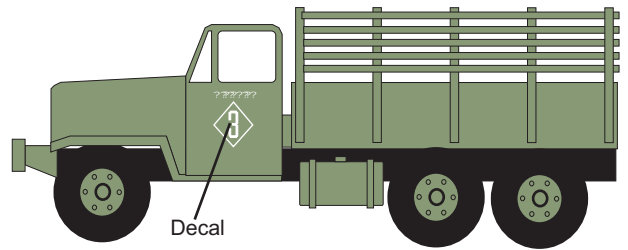

Right View

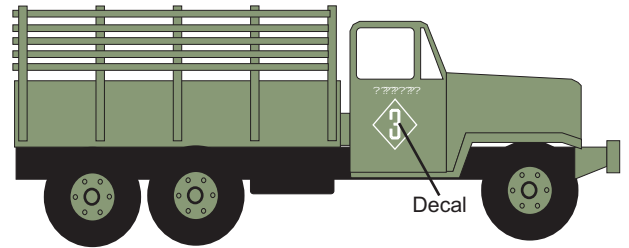

Red Army




Warsaw Pact




US Army CCKW Decal Placement


Left View

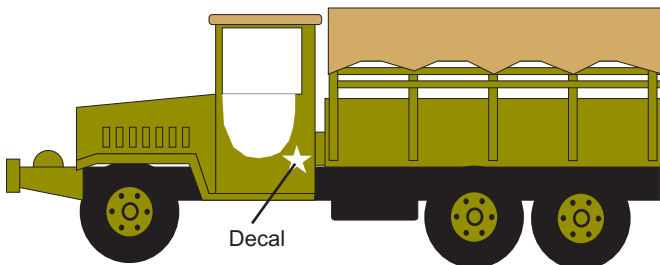

Right View

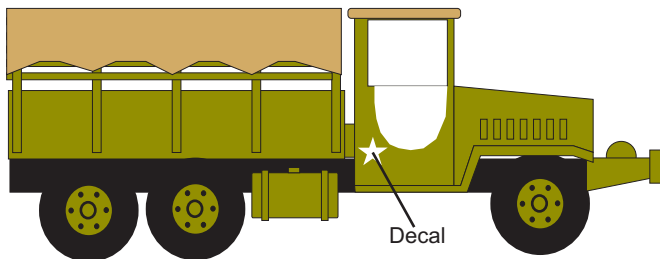


Top View

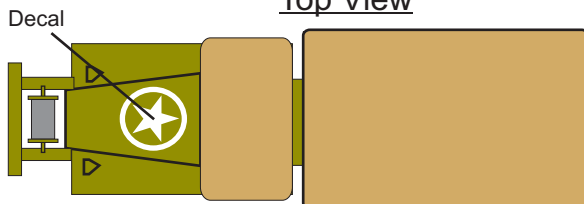


US6 Decal Placement for US Army

Left View

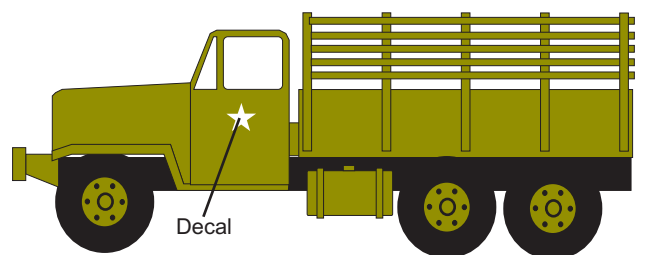

Right View

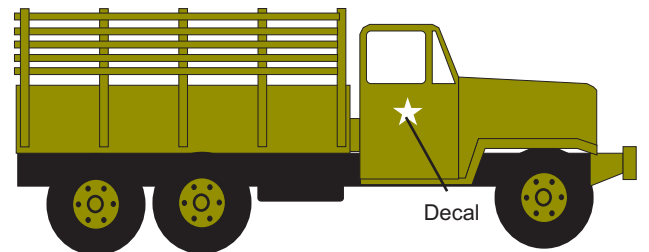

Top View

